



# FRAME - BODY

## **- FRAME - BODY CONTROL AND ADJUSTMENT**

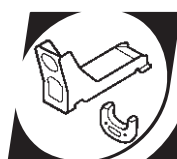

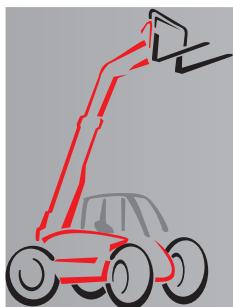



## **FRAME - BODY CONTROL AND ADJUSTMENT**

pages

<b>STOP ADJUSTMENT FUEL TANK AND OIL TANK .....</b>	<b>2</b>
---	----------

**STOP ADJUSTMENT FUEL TANK AND OIL TANK**

Adjustment of the stop on the fuel tank and oil tank is necessary to prevent the tanks from deteriorating and to avoid elements becoming jammed between the tanks and the frame when the truck is in use.

