


FRAME - BODY

- FRAME - BODY CONTROL AND ADJUSTMENT

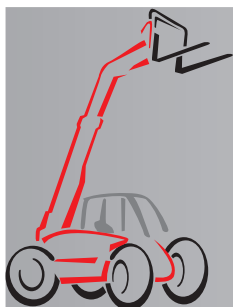



FRAME - BODY CONTROL AND ADJUSTMENT

	pages
STOP ADJUSTMENT FUEL TANK AND OIL TANK	2

STOP ADJUSTMENT FUEL TANK AND OIL TANK

Adjustment of the stop on the fuel tank and oil tank is necessary to prevent the tanks from deteriorating and to avoid elements becoming jammed between the tanks and the frame when the truck is in use.

